

straightcurve®


Specifications

6" Flexline™

LENGTH 87" | TOP THICKNESS 0.31"

FINISHES


- Galvanised Steel
- Weathering Steel

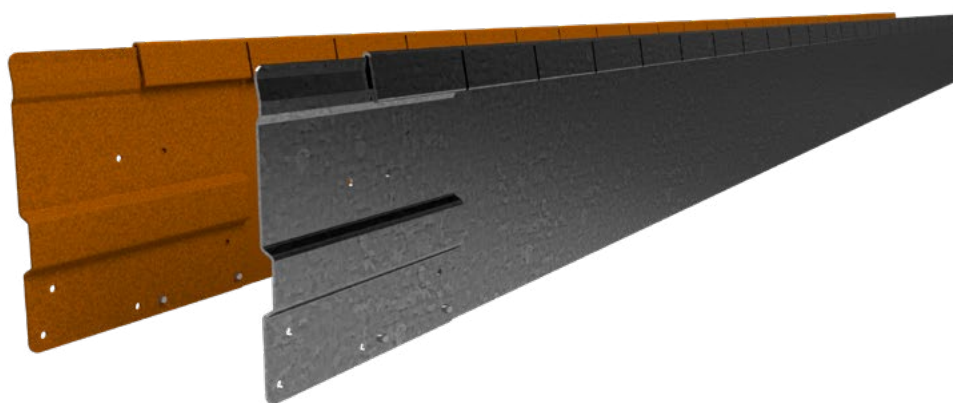

Steel plate thickness 0.06"



SOLD AS SET INCLUDING

- ✓ Connector plate (pre-attached)
- ✓ 3 x galvanised pegs



ADDITIONAL ACCESSORIES

- ✓ 20" Corner piece (bend to desired angle)
- ✓ Hard surface fixing bracket



Installation guide

6" Flexline™



PREPARATIONS

Mark line and level out or create a trench. If using as an invasive grass barrier, clear away all runners entering garden bed first. *Note: This edge allows gentle sloping*

CORNERS

Standard corners are available for purchase, but you can choose to make your own. Simply score a line down the back of the edge and create a sufficient opening (0.2-0.28") in the double folded lip at the top. Bend by hand. Placing a block of wood close to the fold improves the result.

REQUIRED FIXINGS

- ✔ 2 x Tek Screws (12G x 0.63") or
- ✔ 2 x pop rivets (0.16" shaft)


HARD SURFACE FIXING

If you need to secure the edge to hard surfaces, the hard surface fixing bracket can be used. It's compatible with fixing pins or can be bolted down. (Options sold separately)


TIP

- ✔ When working around an existing lawn, use marker paint to set out your line and make a clean cut with your shovel or edge cutter. This way you can install the edge snug against the lawn.
- ✔ Position whole run first to be sure it's spot on before fixing in place.
- ✔ Insert ALL fix pegs adjacent edge (3A), then work from one end to the other to fix (3B).
- ✔ One length makes a tight 28" diameter circle.


STEP 1 - JOIN

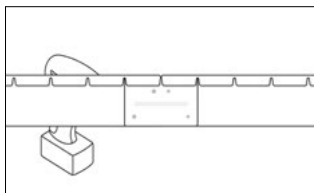


STEP 2 - FLEX

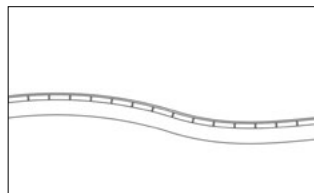


STEP 3A - PEG

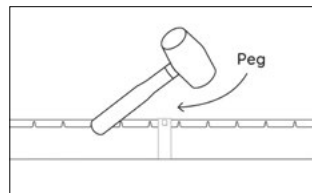


STEP 3B - FIX

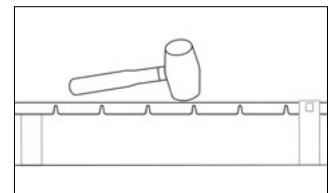


PRE-MADE CORNER

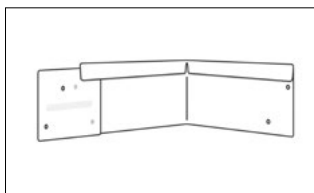

MAKE CORNER - NOTCH/SCORE WITH GRINDER

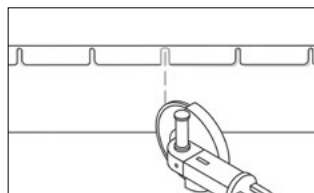

TIGHT RADIUS

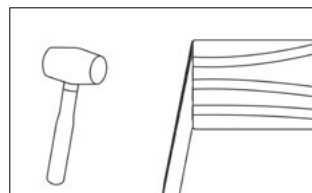

TIGHT RADIUS

